

COMANDOS CONCOX GT06N:

FACTORY#

GMT,W,0#

APN,internet.ideasclaro#

SERVER,1, i1.deltatracking.com,7023,0#

TIMER,30,300#

SENALM,OFF#

GPRSON,1#

RESET#

STATUS#

PARAM#

GPRSSET#