


GV310LAU User Manual

GSM/GPRS/LTE Cat4/WCDMA GNSS Tracker

TRACGV310LAUUM001

Version:1.00

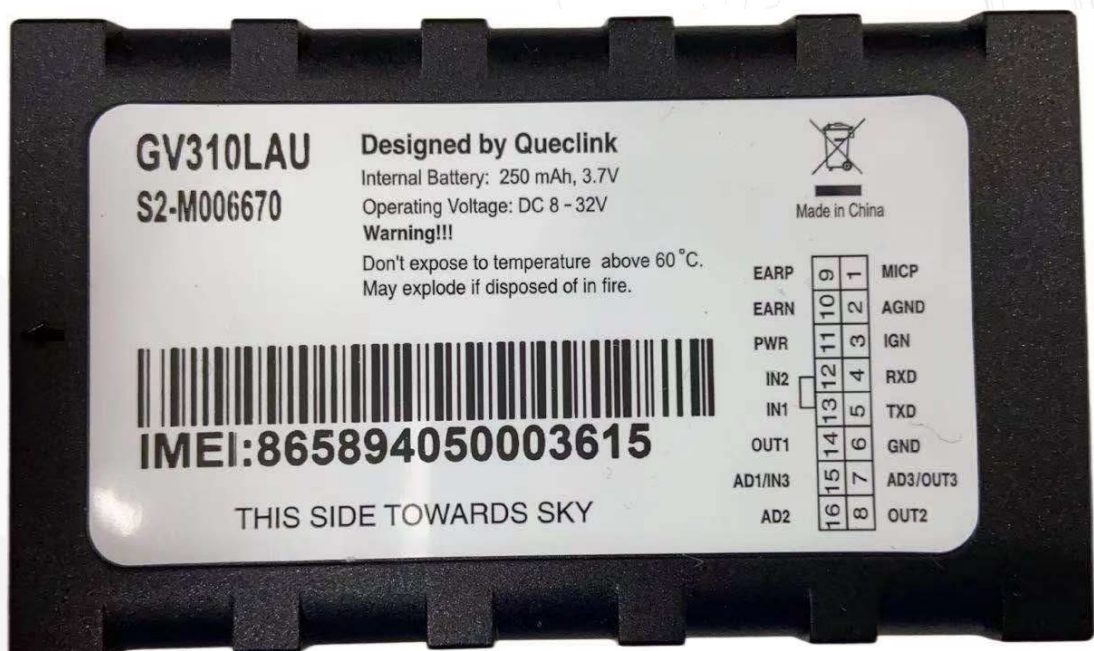

Document Title	GV310LAU User Manual
Version	1.00
Date	2021-08-06
Status	Release
Document Control ID	TRACGV310LAUUM001

General Notes

Queclink offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Queclink. The information provided is based upon requirements specifically provided to Queclink by the customers. Queclink has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Queclink within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Queclink Wireless Solutions Co., Ltd. The copying of this document, distribution to others, and communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Contents

Contents	2
Table Index	3
Figure Index	4
0. Revision History	5
1. Introduction	6
1.1. GV310LAU Product	6
1.2. Reference	6
1.3. Terms and Abbreviations	6
2. Product Overview	7
2.1. Product Appearance	7
2.2. LED Description	7
2.3. Parts List	8
3. Interface Definition	9
4. GV310LAU Device Cable Color	10
5. Get Started	11
5.1. Open and Close the Case	11
5.2. Install a SIM Card	11
5.3. Install the Internal Backup Battery	12
5.4. Switch on the Backup Battery	12
5.5. Installation of the External GPS Antenna (Optional)	12
5.6. Power Supply Connection	13
5.7. Ignition Detection	13
5.8. Digital Inputs	13
5.9. Analog Input/Digital Output	14
5.10. Digital Outputs	14
5.11. Serial Port/UART Interface	16
5.12. Motion Sensor Direction	16
6. Installation Precautions	17
7. Troubleshooting and Safety Info	18
7.1. Troubleshooting	18
7.2. Safety Info	18

Table Index

Table 1: GV310LAU Product.....	6
Table 2: GV310LAU Protocol Reference	6
Table 3: GV310LAU Terms and Abbreviations	6
Table 4: GV310LAU LED Description	7
Table 5: GV310LAU Parts List.....	8
Table 6: Description of 16-Pin Connections.....	9
Table 7: GV310LAU Cable Color Definition	10
Table 8: Electrical Characteristics of Ignition Detection	13
Table 9: Electrical Characteristics of Digital Inputs.....	13
Table 10: Electrical Characteristics of Digital Outputs.....	14
Table 11: GV310LAU Troubleshooting List.....	18

Figure Index

Figure 1: Product View of GV310LAU	7
Figure 2: LEDS on GV310LAU	7
Figure 3: 16-Pin Connector on GV310LAU	9
Figure 4: Open and Close the Case	11
Figure 5: SIM Card Installation	11
Figure 6: Backup Battery Installation	12
Figure 7: Switch and ON/OFF Position	12
Figure 8: External GPS Antenna of GV310LAU	12
Figure 9: Typical Power Connection.....	13
Figure 10: Typical Ignition Detection Connection.....	13
Figure 11: Digital Input Connection	14
Figure 12: Analog Input or Digital Output Connection	14
Figure 13: Digital Output Internal Drive Circuit	14
Figure 14: Typical Connection with Relay	15
Figure 15: Typical Connection with LED	15
Figure 16: Connection with RS232 Port	16
Figure 17: Motion Sensor Direction	16

0. Revision History

Revision	Date	Author	Description of change
1.00	2021-07-21	Eden Cao	Initial.

1. Introduction

The GV310LAU is a compact GNSS tracker designed for a wide variety of vehicle tracking applications. It has multiple I/O interfaces that can be used for monitoring or controlling external devices. The GV310LAU supports various bands of LTE CAT4/WCDMA/GSM used by Latin America cellular operators. The built-in GNSS receiver has superior sensitivity and fast initial positioning. Its built-in 3-axis accelerometer allows motion detection and sophisticated power management algorithms extend battery life. System integration is straightforward as complete documentation is provided for the full featured @Track protocol. The @Track protocol supports a wide variety of reports including emergency alarm, Geo-fence boundary crossings, external power supply monitoring and position reports.

1.1. GV310LAU Product

Table 1: GV310LAU Product

Model No.	Technology	Operating Band (MHz)
GV310LAU	LTE CAT4/WCDMA /GSM	LTE FDD: B1/B2/B3/B4/B5/B7/B8/B28/B66 LTE TDD: B40 WCDMA: B1/B2/B5/B8 GSM: 850/900/1800/1900 MHz

1.2. Reference

Table 2: GV310LAU Protocol Reference

SN	Document Name	Remark
[1]	GV310LAU @Track Air Interface Protocol	The air interface protocol between GV310LAU and the backend server.

1.3. Terms and Abbreviations

Table 3: GV310LAU Terms and Abbreviations

Abbreviation	Description
AGND	Analog Ground
AIN	Analog Input
DIN	Digital Input
DOUT	Digital Output
GND	Ground
MIC	Microphone
RXD	Receive Data
TXD	Transmit Data
EARN	Speaker Negative
EARP	Speaker Positive

2. Product Overview

2.1. Product Appearance



Figure 1: Product View of GV310LAU

2.2. LED Description

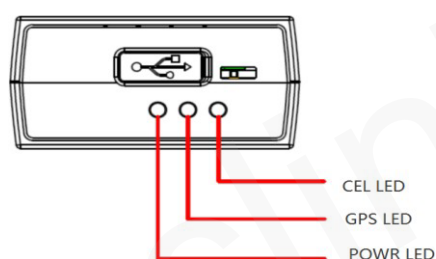


Figure 2: LEDs on GV310LAU

There are three LEDs on GV310LAU. For details, please see the table below.

Table 4: GV310LAU LED Description

LED	Device Status	LED Status
CEL (Note 1)	Device is searching CEL network.	Fast flashing
	Device has registered on the CEL network.	Slow flashing
	SIM card needs PIN to unlock.	ON
GPS (Note 2)	GPS chip is powered off.	OFF
	GPS sends no data or data format error occurs.	Slow flashing
	GPS chip is searching GPS signal.	Fast flashing
	GPS chip has received GPS signal.	ON
	Upgrade the device firmware over the air.	Fast flashing
PWR (Note 2)	No external power and internal battery voltage is lower than 3.6V.	OFF
	No external power and internal battery voltage is lower than 3.7V.	Slow flashing
	External power in and internal battery is charging.	Fast flashing
	The external power is connected and the battery is not in the charging state.	ON
	Upgrade the device firmware via Manage Tool.	Fast flashing

Note:

- CEL LED cannot be configured.
- GPS LED and PWR LED can be configured to turn off by using the Manage Tool.
- Fast flashing: About 100ms ON/200ms OFF.

- Slow flashing: About 200ms ON/1000ms OFF.

2.3. Parts List

Before starting, check whether all the following items have been included with your GV310LAU. If anything is missing, please contact your supplier.

Table 5: GV310LAU Parts List

Name	Picture	Description
GV310LAU Locator	 80*49*26 mm	GSM/GPRS/WCDMA/LTE Cat4/GNSS tracker
User Cable		GV310LAU standard cable
GPS Antenna (Optional)		External GPS Antenna
DATA_CABLE_W (Optional)		USB Data Cable, which can be used for firmware upgrade and configuration

3. Interface Definition

The GV310LAU has a 16-pin interface connector which contains the connections for power, I/O, RS232, MIC, etc. The sequence and definition of the 16-pin connector are shown in the following figure:



Figure 3: 16-pin Connector on GV310LAU

Table 6: Description of 16-pin Connections

Pin No.	Pin Name	Function Description
1	MICP	MIC positive input
2	AGND	MIC negative input
3	IGN	Ignition detection input, positive trigger
4	RXD	The RXD_RS232
5	TXD	The TXD_RS232
6	GND	Power and digital ground
7	AD3/OUT3	One special I/O can be configured as a 0-16V analog input or an open drain output with 150 mA max drive current
8	OUT2	Open drain output2, 150mA max drive current
9	EARP	Speaker positive output
10	EARN	Speaker negative output
11	PWR	External DC power input, 8-32V
12	IN2	Digital input2, negative trigger
13	IN1	Digital input1, negative trigger
14	OUT1	Open drain output1, 150mA max drive current, with latch circuit
15	AD1/IN3	Analog input1 (0-16V) or digital input 3, negative trigger
16	AD2	Analog input2 (0-16V)

4. GV310LAU Device Cable Color

Table 7: GV310LAU Cable Color Definition

Definition	Color	PIN No.	Cable	PIN No.	Color	Definition
OUT2	Yellow	8		16	Brown/White	AD2
AD3/OUT3	Brown	7		15	Green	AD1/IN3
GND	Black	6		14	Blue	OUT1
TXD	White/Black	5		13	Orange	IN1
RXD	Pink	4		12	Orange/Black	IN2
IGN	White	3		11	Red	PWR
AGND	Gray/Black	2		10	Purple/White	EARN
MICP	Gray	1		9	Purple	EARP

5. Get Started

5.1. Open and Close the Case



Figure 4: Open and Close the Case

To open: Insert the opener into the gap of the case as shown above, and push the opener up until the case is unsnapped.

To close: Place the cover on the bottom at the position as shown above. Slide the cover against the direction of the arrow until it snaps.

5.2. Install a SIM Card

Install the SIM card into the holder when power is off as shown below (unplug the 16-pin cable and switch the internal battery to OFF position). Take care to align the cut mark. Close the card holder and then close the case.



Figure 5: SIM Card Installation

5.3. Install the Internal Backup Battery

GV310LAU has an internal backup Li-ion battery.



Figure 6: Backup Battery Installation

5.4. Switch on the Backup Battery

To use the GV310LAU backup battery, the switch must be at the ON position. The switch and the ON/OFF position are shown as below.



Figure 7: Switch and ON/OFF Position

Note:

- The switch must be at the **OFF** position when the GV310LAU is shipped on an aircraft.
- When the switch is at the **OFF** position, the battery cannot be charged nor be discharged.

5.5. Installation of the External GPS Antenna (Optional)

There is an SMA GPS antenna connector on GV310LAU. The GV310LAU will automatically detect and use the external antenna when it is connected.



Figure 8: External GPS Antenna of GV310LAU

5.6. Power Supply Connection

PWR (pin 11)/GND (pin 6) are the power input pins. The input voltage range for the device is from 8V to 32V. The device is designed to be installed in vehicles that operate on 12V or 24V systems without the need for external transformers. But it is recommended to use Power Protection Cable Kit if it is installed in a truck with 24V battery.

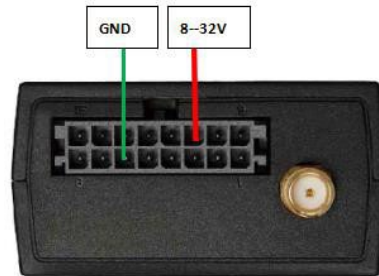


Figure 9: Typical Power Connection

5.7. Ignition Detection

IGN (pin 3) is used for ignition detection. It is recommended to connect this pin to the **RUN** position of the vehicle ignition switch as shown below.

An alternative to connect to the ignition switch is to find a non-permanent power source that is only available when the vehicle is running, for example, the power source for the FM radio.

IGN signal can be configured to transmit information to the backend server when ignition is on and enter the power saving mode when ignition is off.

Table 8: Electrical Characteristics of Ignition Detection

Logical State	Electrical Characteristics
Active	5.0V to 32V
Inactive	0V to 3V or open loop

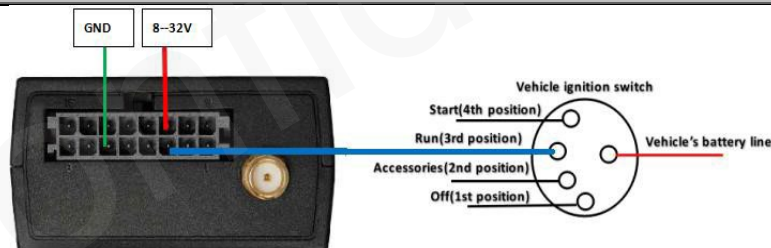


Figure 10: Typical Ignition Detection Connection

5.8. Digital Inputs

There are three general purpose digital inputs on GV310LAU. They all are negative triggers.

Table 9: Electrical Characteristics of Digital Inputs

Logical State	Electrical Characteristics
Active	0V to 1.2V
Inactive	Open loop

The following picture shows the recommended connection of a digital input.

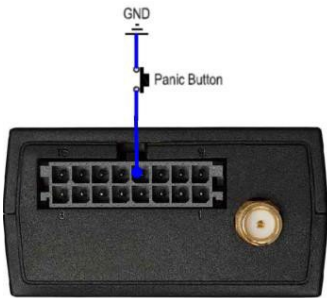


Figure 11: Digital Input Connection

5.9. Analog Input/Digital Output

This is a special I/O that can be configured as a 0-16V analog input or an open drain output with 150mA max drive current.

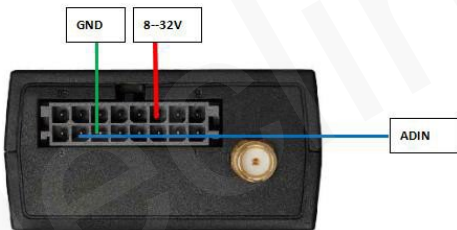


Figure 12: Analog Input or Digital Output Connection

5.10. Digital Outputs

There are three digital outputs on GV310LAU. All are open-drain type with maximum drain current of 150 mA. Each output has a built-in over current PTC resettable fuse.

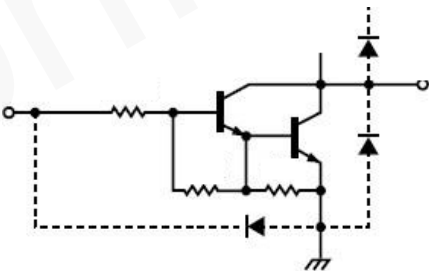


Figure 13: Digital Output Internal Drive Circuit

Table 10: Electrical Characteristics of Digital Outputs

Logical State	Electrical Characteristics
Enable	<1.5V @150 mA
Disable	Open drain

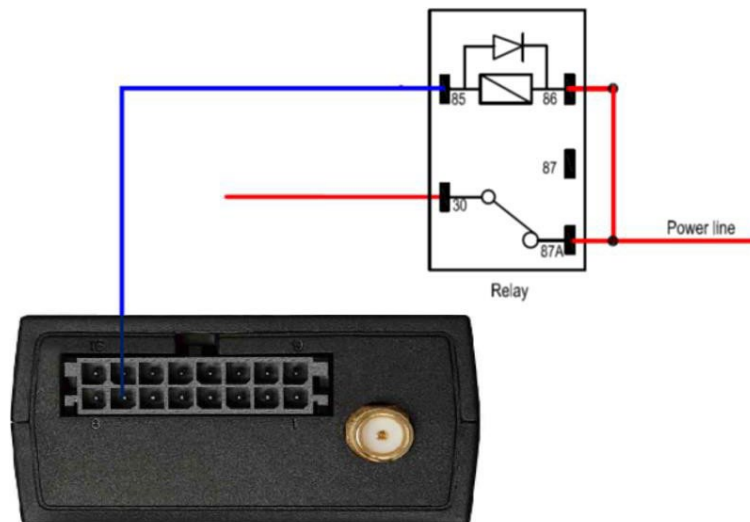


Figure 14: Typical Connection with Relay

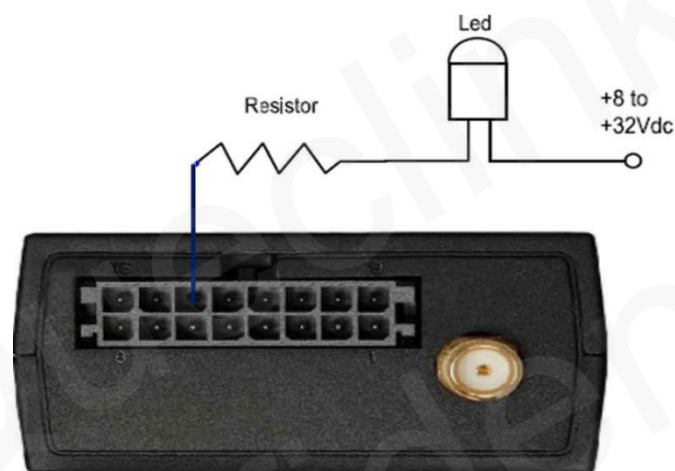


Figure 15: Typical Connection with LED

Note: OUT1 will latch the output state during reset.

Warning: Many modern relays come with a flyback diode pre-installed internal to the relay itself. If the relay has this diode, insure the relay polarity connected is properly used. If this diode is not internal, it should be added externally. A common diode such as a 1N4004 will work in most circumstances.

5.11. Serial Port/UART Interface

There are two lines dedicated to the Serial Port/UART interface (TXD/RXD). TXD/RXD is standard RS232 signal.



Figure 16: Connection with RS232 Port

5.12. Motion Sensor Direction

GV310LAU has an internal 3-axis accelerometer supporting driving behavior monitoring, crash detection and motion detection. The following shows the directions of the motion sensor.



Figure 17: Motion Sensor Direction

6. Installation Precautions

- Firmly install the device to a reliable surface to prevent falling off.
- Make the side with antenna face sky to have better signal reception.
- Do not install the device under a metal surface or in an enclosed environment where it is difficult to get GNSS and network signals.

7. Troubleshooting and Safety Info

7.1. Troubleshooting

Table 11: GV310LAU Troubleshooting List

Problem	Possible Reason	Solution
After the device is turned on, the CEL LED always flashes quickly.	The signal is too weak. The device isn't registered on the network.	Move the device to a place with good network signal.
Messages can't be reported to the backend server by network.	APN is incorrect.	Ask the network operator for the right APN.
	The IP address or port of the backend server is wrong.	Make sure the IP address for the backend server is an identified address in the Internet.
There is no response from UART when the device is configured by UART.	The port is not ready or the device is not powered on.	Please check the port and the device to ensure they are working properly.
The device can't get GNSS position.	The GNSS signal is weak.	Move the device to a place under open sky.
		It is better to make the side with antenna face the sky.

7.2. Safety Info

- Do not disassemble the device by yourself.
- Do not put the device in the overheated or too humid place, and avoid exposure to direct sunlight. Too high temperature will damage the device or even cause battery explosion.
- Do not use the device on the airplane or near medical equipment.

Queclink
Rita Pan
2023.03.24